



BS202
Grill
Sandwich Maker



USER MANUAL

WELCOME

01


Congratulations!

Dear Customer,

Now you are the proud owner of Grill Sandwich Maker. It is innovatively designed with safety features and technology. Your Grill Sandwich Maker is manufactured under stringent quality control norms to give you a world class product with years of trouble free operation. This manual will answer all your queries and do away with all your doubts. We have provided a detailed description of your Grill Sandwich Maker and precise instruction for installation, operation and maintenance.

Please read this instruction manual carefully before using the product and keep it carefully for future reference.

We promise you Happiness with your Grill Sandwich Maker.

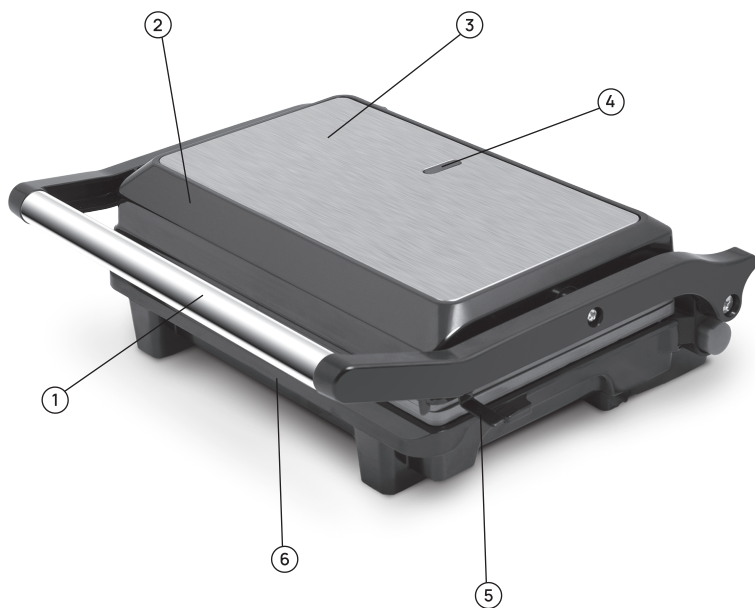

1. Handle
2. Upper Housing
3. Decorative panels
4. Ready Light
5. Clasp to fasten handle
6. Bottom Housing

Please read all instructions carefully before using the product:

- Use only on AC Voltage, 50/60 Hz. This product is intended for household use only.
- Do not touch hot surfaces. Always use handles when handling the product.
- To protect against the risk of electric shock, do not immerse the cord, plug, or cooking unit in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Always unplug the product from the outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate the product if it has been damaged in any way. To avoid the risk of electric shock, never try to repair the Press Grill yourself. Take it to an authorized service station for examination and repair. Incorrect reassembly could present a risk of electric shock when the Press Grill is used.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- Do not use the product outdoors or for commercial purposes.
- Do not let the power cord hang over the edge of the table or counter, or touch hot surfaces.
- Always unplug the unit when finished using it.
- Do not attempt to operate the product using an external timer or separate remote-control system.
- Extreme caution must be exercised when moving the product.

It is crucial to read all the instructions carefully before using the Grill Sandwich Maker for the first time and keep them for future reference.

Follow these steps before using the Grill Sandwich Maker:

- Remove all packaging.
- Wipe the Cooking Plates using a sponge or cloth dampened in warm water.
DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ON THE COOKING SURFACES.
- Dry the plates with a cloth or paper towel.
- For better results, apply a thin layer of cooking oil or cooking spray on the cooking plates.

Note: When you heat the Grill Sandwich Maker for the first time, it may emit slight smoke or odor. This is normal for many heating appliances and does not affect the safety of the appliance.

Follow these steps to properly use your Grill Sandwich Maker:

1. Close the Grill Sandwich Maker and plug it into an outlet. Immediately notice the ready light come on, indicating preheating.
2. After roughly 3 minutes, the ready light will go off. This means that the Grill Sandwich Maker has reached the baking temperature.
3. Quickly open the Grill Sandwich Maker, put your sandwich, meat, or other foods on the bottom cooking plate, and close it firmly.
4. Cook the food for 3-8 minutes or until it's golden brown. The ready light will automatically go off when the food is cooked.
5. Use a plastic spatula to remove the food once it's cooked. Never use metal tongs or a knife as these can damage the non-stick coating of the cook plates.
6. Unplug the Grill Sandwich Maker and leave it open to cool.

CLEANING AND CARE

You must always unplug the Grill Sandwich Maker and let it cool before cleaning. Under no circumstances should you immerse the Grill Sandwich Maker in water or put it in the dishwasher.

When cleaning the cooking plates, you must wipe away the food residue. If the residue is baked-on, you can use warm water mixed with detergent and a non-abrasive scouring pad. Never use any abrasive or metal utensils, as they can damage the non-stick surface.

When cleaning the outside of the Grill Sandwich Maker, use only a damp cloth. Do not use any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse the Grill Sandwich Maker in water or any other liquid.

Finally, rinse and dry thoroughly with a clean, soft cloth, then replace it.

STORAGE

Your safety is our top priority, so please follow these guidelines strictly.

- It is compulsory to always unplug the grill toaster before storing it.
- To prevent accidents or damage, wait until the toaster is cool and dry before storing it.
- Do not forget to wrap the power cord around the base of the toaster for convenient and safe storage.

If found defective, the unit shall be delivered at the nearest authorised service centre. The usage of the unit should be avoided until it has been fully repaired. Following the repair, the user must adhere strictly to the usage instructions provided by the service centre to prevent any potential mishaps in the future.

The product will be repaired free of cost under warranty period. Warranty covers any defects arising due to the defects in material or workmanship.

Wipro and its authorized service centres will make every effort to ensure prompt repairs are carried out, resulting in a fully functional unit that is free of any malfunctions.



For repair, please contact
Wipro Elato Customer Care on **1800-425-1969**

For more information please visit:
www.wiproappliances.com