



VESTA

1.2 Ltr
Multicooker

600
WATT



USER MANUAL

PRODUCT IDENTIFICATION

01



IMPORTANT SAFETY INSTRUCTIONS

02

IN ORDER TO BETTER UNDERSTAND AND USE THIS PRODUCT,
PLEASE READ THE INSTRUCTIONS CAREFULLY BEFORE USE AND
FOLLOW THE INSTRUCTIONS:

1. Before use, please check whether the rated voltage on the product nameplate is the same as the voltage you use.

2. Please, use the power supply with grounding protection to ensure safety.

3. When in use, the product should be placed on a stable platform and placed out of the reach of children.

4. Do not allow children or persons with disabilities to approach or touch the product while working to avoid burns.

5. Do not use the product on the surface of objects that are not heat-resistant, such as carpets or plastics. Objects that are easily damaged by steam and should not be placed on top of the product.

6. Do not press the power button too hard in case the power switch is damaged.

IMPORTANT SAFETY INSTRUCTIONS

03

7. Please add proper water in case the boiling liquid in the pot overflows. Also, do not add too little water to prevent the product from damage due to dry burning of the heating plate. Moreover, the pot should be covered with the glass lid when boiling water.

8. While using it for the first time, please clean the stainless-steel liner and glass lid with a cotton cloth and then add water and power on. Heat and boil the water to disinfect the appliance.

9. When dry burning occurs, please add water into the pot or unplug the power and at the same time do not touch the heating plate by hand to avoid burning yourself.

10. When it works, do not touch the glass lid or the emitting steam to avoid scalding.

11. Since the product owns the function of overheating protection, if you need to continuously cook, it has to be properly cooled down before you cook again. With the thermostat, reset the power and turn on again.

12. Do not immerse the machine in water or in any other liquids while cleaning. Do not allow liquid to flow into the body to avoid danger. The base and the outside of the power base must not be wet.

IMPORTANT SAFETY INSTRUCTIONS

04

13. Do not operate the appliance with a damaged power cord or plug or after the appliance malfunctions or has been damage in any manner. For repair, please contact Wipro Vesta Customer Care on 1800-425-1969,14. The water on the surface and bottom of the pot must be wiped off before turning on the power.

15. While adding water in the pot, cleaning or moving the pot, the device should not be connected.

16. Do not wipe the device with gasoline, toluene, or other solvents.

17. Check the appliance regularly for signs of wear or damage. Do not use if you observe any damage.

18. Do not insert pins, wires, or other objects into any gaps or openings in the pot or base to avoid electric shock.

19. Do not hang the power cord on the table or in contact with high-temperature objects. And if not used for a long time, please store the power cord in the cable compartment of power base.

20. The following conditions must be ensured when the power is off: when unattended, when the inside of the pot is dry, when adding water, when not in use, when cleaning or moving the product, etc.

1. Switch to "OFF", when the product is not in use; switch to "Low Heat", when you want to operate at a low heat setting; switch to "High Heat", when you want to operate at a high heat setting. The product will always be heated at low setting and high setting, it cannot be powered off automatically, glass lid when boiling water.
-
2. Switch from "OFF" to the "High Heat" directly, to boil water directly. Switch to the "Low Heat", to keep the water in a simmered state. If you don't need to keep the water warm, switch to "OFF" directly to turn off.

COOK RICE EASILY

1. Fill the pot with the required mixture of rice & water. Make sure, not to exceed the max water level.

2. Plug in the appliance into the power socket and twist the "Power Knob" to the "High" setting. The indicator will light up and the machine will start working.

3. When the rice is cooked, turn the "Power Knob" to the "Low" setting that prevents the pot bottom from being burnt.

4. When the rice is done cooking, turn off the "Power Knob" and unplug the appliance.

BOIL WATER/MILK

1. Fill the pot with water/Milk not exceeding the maximum water level.

2. Plug in the appliance into the power socket and twist the "Power Knob" to the "High" or "Low" setting. The indicator will light up and the machine will start working. After some time, water will start boiling.

3. When the water is boiled, turn off the "Power Knob" and unplug the appliance.

COOK INSTANT NOODLES/RAMEN

1. Remove the glass lid and fill the pot with water according to the quantity of noodle. Make sure not to exceed the max water level. Close the glass lid after the ingredients are poured in.

2. Plug in the appliance into the power socket and twist the "Power Knob" to the "High" setting. The indicator will light up and the machine will start working.

3. Once the water starts to boil, put noodles & spices in the pot. After food gets softer, stir the food evenly with a tablespoon. Turn the power to "Low" setting to prevent the bottom from being burnt. Continue the process until the food is well cooked. You can switch between "Low" and "High" setting according to your needs.

EASILY BOIL EGGS

1. Fill the pot with water according to the quantity of egg but makes sure not to exceed the max water level including the eggs.

2. Plug in the appliance into the power socket and twist the "Power Knob" to the "High" setting. The indicator will light up and the machine will start working.

3. When the Egg is boiled well, turn off the "Power switch" and unplug the appliance.

STEAM DHOKLA, IDLI, MOMOS, ETC

1. Fill the kettle with required amount of water. Ideally the water level will be 1.5 cm-2 cm from the pot bottom. Place the steamer onto the pot and put the food on the steaming bowl or other utensils.
2. Close the lid and plug in the appliance into the power socket and twist the "Power Knob" to the "High" setting. The indicator will light up and the machine will start working.
3. Wait for some time until food is well cooked (steamed) based on recipe, turn off the "Power Knob" and unplug the appliance.

COOK OATMEAL/SOUP

1. Fill the pot with water according to the quantity of food but not exceeding the maximum water level. Put the food into the inner pot and close the glass lid.
2. Plug in the appliance into the power socket and twist the "Power Knob" to the "High" setting. The indicator will light up and the machine will start working.
3. When the food is cooked, turn the "Power Knob" to the "Low" setting that prevents the pot bottom from being burnt.
4. When food is cooked well, turn off the "Power Knob" and unplug the appliance.

TEA

1. Remove the glass lid and fill the pot with milk & water till the maximum water level, then close the lid

2. Plug in the appliance into the power socket and twist the "Power Knob" to the "High" setting. The indicator will light up and the machine will start working

3. When the water will start to boil in the pot, put the required Tea & sugar into the pot and stir with a tablespoon. Turn the "Power Switch" to "Low" to prevent the bottom from being burnt and let the appliance continue working until the Tea is boiled well. You can switch between "Low" and "High" setting according to your need.

CLEANING AND MAINTENANCE

10

1. While not in use, please unplug the power from the power outlet in time.

2. Stainless-Steel Liner, glass cover, and steamer can be cleaned with detergent and sponge. Do not use steel balls and any chemical or abrasive powder cleaner to clean the outer surface of the pot.

3. Please wipe the pot with a wet towel when the body is dirty, but don't put it into water for cleaning as to avoid power leakage and fault.

4. Due to different water quality in the surrounding, hard water, in the long-term will affect the heating conditions, and will form water scales. Although it is harmless to health but it will affect the normal heating and appearance of the product, it is necessary to clean it regularly. The cleaning process can be referred here: Use ordinary white vinegar and water in accordance with the ratio of 1:2, after boiling the water, place it for about 1 hour, then pour it out and clean it with clear water. Repeat the same about 2 times to remove the scale.

5. When not in use for a long time, please wipe it clean and put it into a package in a ventilated and dry place to avoid moisture.

PRODUCT SPECIFICATION

Description	Wipro Vesta 1.2 Ltr Multicooker
Model	VE011120
Power	230V, 60Hz, 600W
Capacity	1.2L main pot
Product size	240*170*250mm
Net Weight	1KG
Dimension	182X158X162MM

For more information please visit
Wipro Smart light: www.wiproconsumerlighting.com