



BK212
1.5L Multicooker



USER MANUAL

PART IDENTIFICATION

01



1. Lid
2. Cooking Pot Body
3. Power Base
4. Glass Cover
5. Steamer Parts
6. Handle
7. Egg Tray

- Using electrical equipment can be dangerous, please read the instructions carefully before use.
- Remove all packing and any labels.
- Throw away the first lot of water after boiling.

IMPORTANT SAFETY INSTRUCTIONS

01. Before connecting the cooking pot to the power supply, check if the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the cooking pot.

02. In case of obvious damage to the appliance or the cable, consult an electrician.

03. Repairs to electrical equipment may only be carried out by trained person(s).

04. Never allow children to use electrical equipment without supervision.

05. Avoid contact with steam coming out of the spout area when pouring and out of the lid when refilling.

06. Never use the appliance outside or expose it directly to the environment.

07. The boiler gets hot during use, therefore do not touch the appliance except for the handle.

08. Do not fill to above the mark "MAX", because the water may boil over and potentially splash out.

09. Do not open the lid while the appliance is on.

10. Never put the cooker pot on gas burners.
11. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid a hazard.
12. Use only on a dry, anti-slip, level surface.
13. Never put the base, cord, or plug in liquid.
14. Never switch on the appliance when its lid is open.
15. Make sure the cooking pot is switched off before lifting.
16. Always unplug your cooking pot when not in use.
17. Never immerse the base or cord in water, or allow moisture to contact with these parts.
18. If there is no water in the cooking pot, do not turn it on.

HOW TO USE

- Pour the required water into the cooking pot (Soft, Medium, Hard).
- Unroll the cord and place the cordless pot on the base.
- Place the raw food on the tray and close the lid.
- Plug in the main cord and turn on the cooking pot.
- The device will auto-turn off once the water is drained.

COOK RICE EASILY

- 01.** Fill the pot with the required mixture of rice water. Make sure, not to exceed the maximum water level.
- 02.** Plug the appliance into the power socket and twist the power knob to the high setting. The indicator will light up and the machine will start working.
- 03.** When the rice is cooked, turn the power knob to the low setting that prevents the pot bottom from being burnt.
- 04.** When the rice is done cooking, turn off the power knob and unplug the appliance.

BOIL WATER/MILK

- 01.** Fill the pot with water/milk not exceeding the maximum water level.

- 02.** Plug the appliance into the power socket and twist the power knob to the High or Low setting. The indicator will light up and the machine will start working. After some time, the water will start boiling.

- 03.** When the water is boiled, turn off the lower knob and unplug the appliance.

COOK INSTANT NOODLES/RAMEN

- 01.** Remove the glass lid and fill the pot with water according to the quantity of noodles. Make sure not to exceed the maximum water level. Close the glass lid after the ingredients are poured in.

- 02.** Plug the appliance into the power socket and twist the power knob to the high setting. The indicator will light up and the machine will start working.

03. Once the water starts to boil, put noodles and spices in the pot. After the food gets softer, stir the food evenly with a tablespoon.

04. Turn the power to a low setting to prevent the bottom from being burnt. Continue the process until the food is well cooked. You can switch between low and high settings according to your needs.

EASILY BOIL EGGS

01. Fill the pot with water according to the quantity of eggs but make sure not to exceed the maximum water level including the eggs.

02. Plug the appliance into the power socket and twist the power knob to the high setting. The indicator will light up and the machine will start working.

03. When the egg is boiled well, turn off the power switch and unplug the appliance.

TEA

01. Remove the glass lid and fill the pot with milk water till the maximum water level, then close the lid.

02. Plug the appliance into the power socket and twist the power knob to the high setting. The indicator will light up and the machine will start working.

03. When the water starts to boil in the pot, put the required tea sugar into the pot and stir with a tablespoon.

04. Turn the power switch to low to prevent the bottom from being burnt and let the appliance continue working until the tea is boiled well. You can switch between low and high settings according to your needs.

01. While not in use, please unplug the power from the power outlet in time.

02. Stainless steel liner, glass cover, and steamer can be cleaned with detergent and sponge. Do not use steel balls and any chemical or abrasive powder cleaner to clean the outer surface of the pot.

03. Please wipe the pot with a wet towel when the body is dirty, but don't put it into water for cleaning to avoid power leakage and fault.

04. Due to different water quality in the surroundings, hard water, in the long term will affect the heating conditions and will form water scales. Although it is harmless to health it will affect the normal heating and appearance of the product, so it is necessary to clean it regularly.

THE CLEANING PROCESS CAN BE REFERRED TO HERE

Use ordinary white vinegar and water by a ratio of 1:2, after boiling the water, place it for about 1 hour, then pour it out and clean it with clear water. Repeat the same about 2 times to remove the scale.

When not in use for a long time, please wipe it clean and put it into a package in a ventilated and dry place to avoid moisture.

If found defective, the unit shall be delivered at the nearest authorised service centre. The usage of the unit should be avoided until it has been fully repaired. Following the repair, the user must adhere strictly to the usage instructions provided by the service centre to prevent any potential mishaps in the future.

The product will be repaired free of cost under warranty period. Warranty covers any defects arising due to the defects in material or workmanship.

Wipro and its authorized service centres will make every effort to ensure prompt repairs are carried out, resulting in a fully functional unit that is free of any malfunctions.



For repair, please contact
Wipro Elato Customer Care on **1800-425-1969**
For feedback, please write to **feedback.wcc@wipro.com**

For more information please visit:
www.wiproappliances.com